


## DR2100 COM Port Settings

RS232 、 RS422 、 RS485 Select (JP8 、 JP9)

Jumper	RS232	RS422	RS485
JP8 (2x3)	1-2	3-4	5-6
JP9 (3x4)	1-2	2-3	2-3
	4-5-	5-6	5-6
	7-8	8-9	8-9
	10-11	11-12	11-12

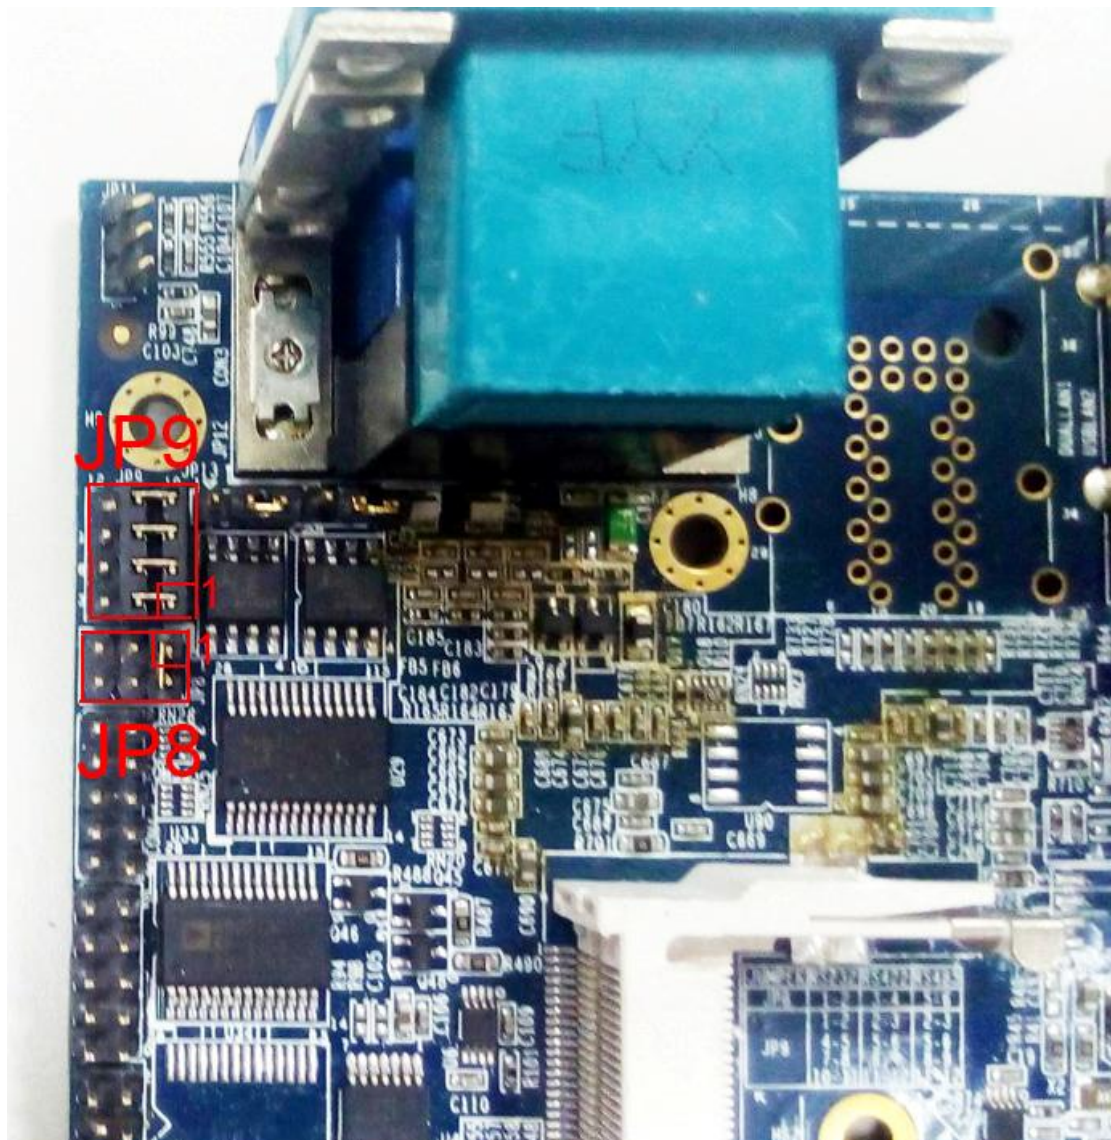

## RS422、RS485 Select (JP16, JP19, JP20)

Jumper	RS422	RS485
JP16	2-3	1-2
JP19	2-3	1-2
JP20	2-3	1-2

