



Rugged Tablet PC

Quick Start Guide v1.0


For the complete user manual and other helpful resources, go to

www.winmate.com.tw

How To Start Your Rugged Tablet PC


1) Connecting the AC Power

Our tablet PC can operate either on the external AC power adapter or internal battery power. It is suggested that you use AC power when you start up the tablet PC first time

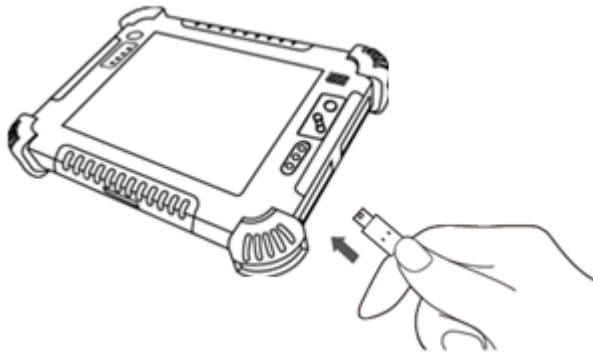

2) Turn on the Rugged Tablet PC

Make sure that the tablet PC is either connected to AC power or the battery pack with power. And press and hold power button about 3 second. You can feel a slight vibration when the Tablet PC is turned on.

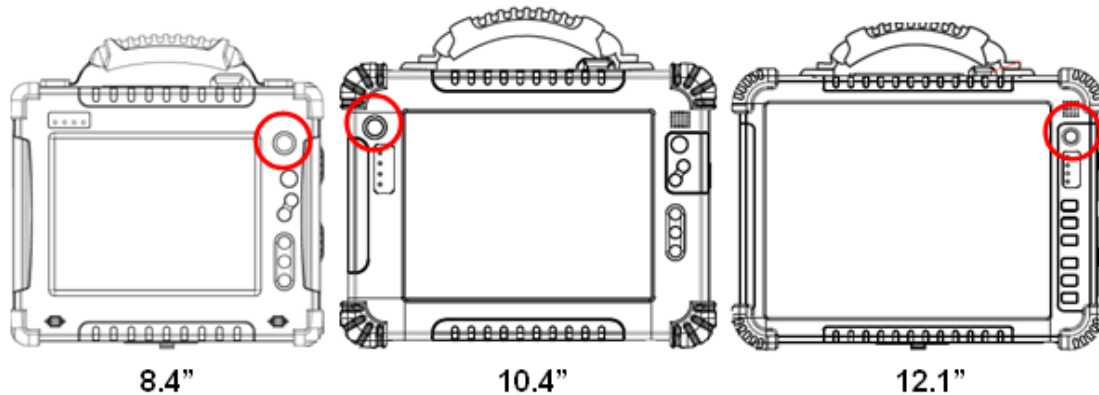

How To Insert SIM / SD CARD


1) Turn off the Rugged Tablet PC

8.4" : please remove left-hand side cover and insert SIM card

please insert SD Card into SD card Slot on the right-hand side



10.4" / 12.1" : please insert SIM card and SD card on the right-hand side

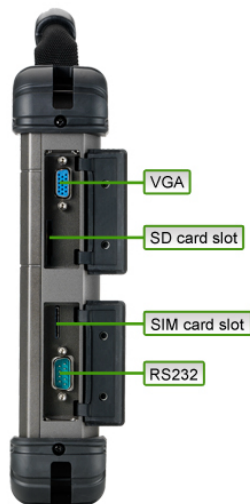

Before starting to use Rugged Tablet PC

1) Insert SD card / SIM card (Optional)

To enable some functions need bigger storage space, such as camera or other software, please insert a SD card before using. If your Rugged Tablet PC supports 3G, remember insert a SIM card to activate your data connection.

2) Charge the Battery

The battery in your new Rugged Tablet PC device is not charged yet. Please charge with attached 19V adapter cable before you first use. The adapter operates on any voltage in the range of 100~240 V AC

****Caution**

1. When you disconnect the AC adapter, disconnect from the electrical outlet first and then from the tablet PC. A reverse procedure may damage the AC adapter or tablet PC.
2. Always hold the plug head when you unplug the connector, Never pull on the cord.

The AC adapter is designed for use with your tablet PC only. Connecting the AC adapter to another device can damage the adapter.

3) Some tips for using and caring your Rugged Tablet PC

The following are some Power-Saving Tips suggestions to maximize the battery's operating time.

- Do not disable Power Management.
- Decrease the LCD brightness to the lowest comfortable level.
- Shorten the length of time before Windows turn off the display.
- USB devices use power just by being connected. If you use a USB mouse, you can save power by disconnecting the mouse and using the optional touchscreen pen.
- If you use a USB flash drive, unplug it when you are not using it.
- Deactivate the Wireless LAN function if you are not using it.
- Deactivate the Bluetooth wireless feature if you are not using it.
- Turn off the tablet PC when you are not using it.


To Know your Rugged Tablet PC more

8.4" Rugged Tablet PC :

Front View




Back View

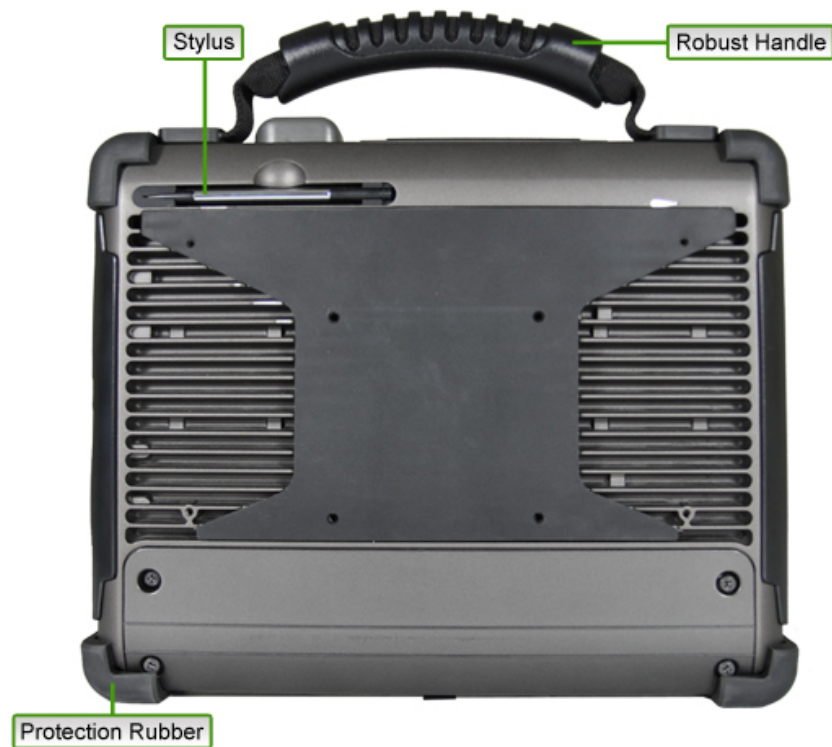

10.4" Rugged Tablet PC :
Front View




Back View

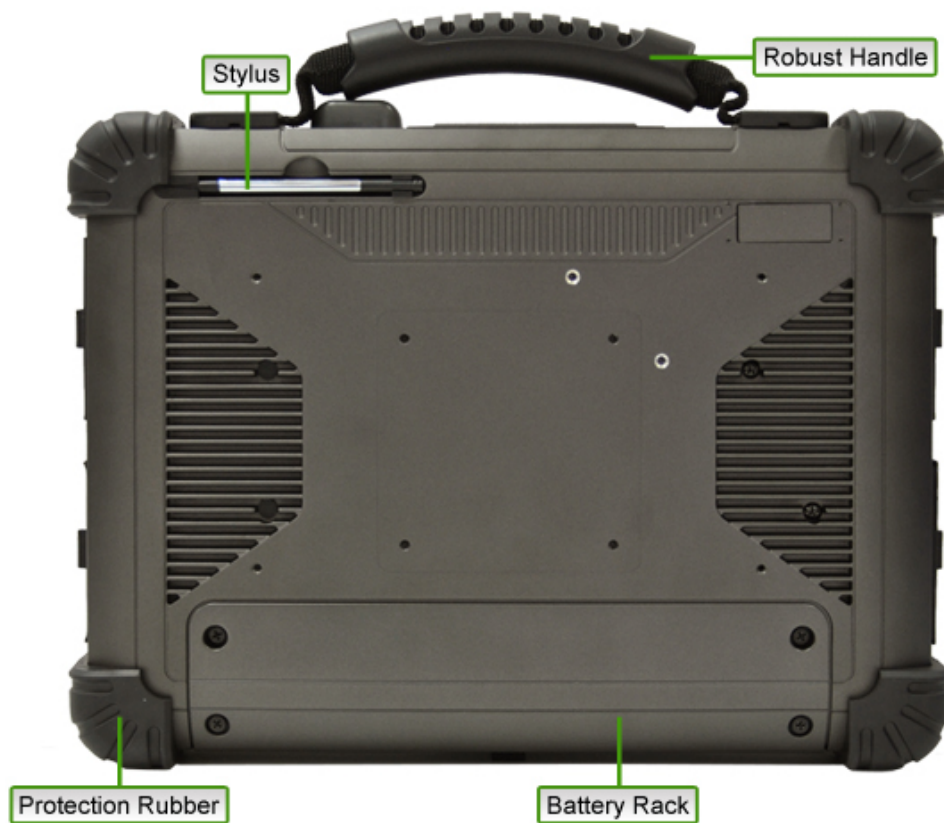

12.1" Rugged Tablet PC :
Front View



Back View

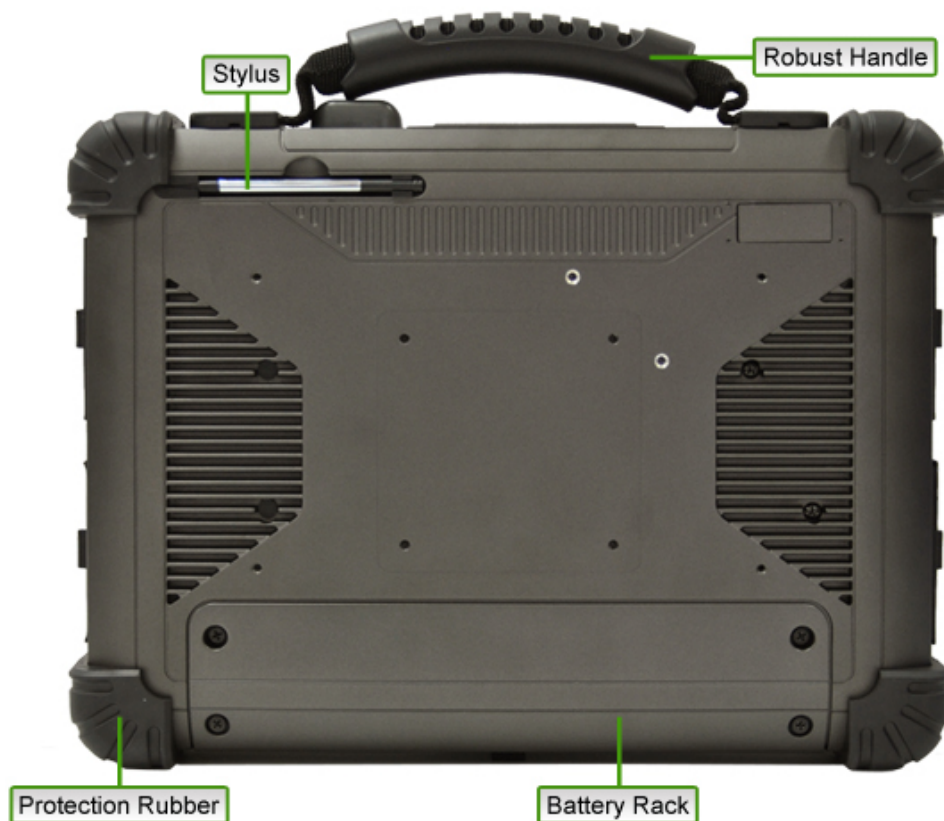

There's more here

- Keep your Rugged Tablet PC updated, and find the latest software, user manual, online help and more at :
<http://www.winmate.com.tw/DownCenter/DownLoadCenter.asp?DownType=13>
- Find more accessories for you Rugged Tablet PC at :
<http://www.winmate.com.tw/TabletPC/accessory.htm#>
- For more news, tips, video, and so much more – go to Winmate website :
<http://www.winmate.com.tw/index.htm>