

Installation Instructions


Yoke Mount Kit



Unpacking

The Yoke Mount Kit includes:

Quantity	Description
1	Yoke Mount Bracket
1	Short Clamp Adjustment Knob
1	Adjustment Handle
1	M5 Screw
2	M6 Washer
2	Stand Rubber

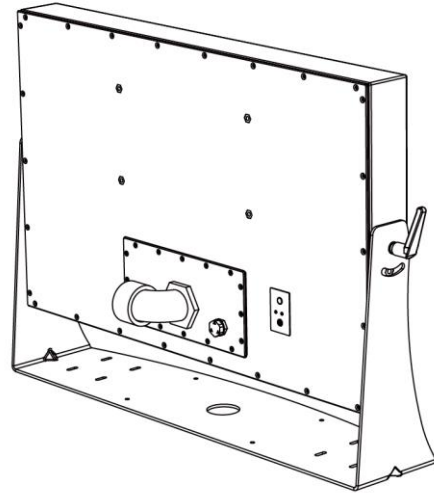

Safety Warnings

- Before installing any product, inspect all hardware, brackets and associated equipment for damage.
- Any missing, corroded, deformed, or non-load rated component could significantly reduce the strength of the installation or placement.
- To avoid the possibility of electrical shock, turn off power supply before installation or servicing.
- Consult a licensed engineer regarding physical equipment installation. Adhere to all local, state and national regulations regarding the safety and operation of equipment.
- Attach the base of this yoke bracket to the load-bearing structure using appropriate load-rated hardware approved for the application.
- Mount an object securely to prevent it from falling and causing damage or injury.



Installation Steps

1. Prepare the mounting surface for the yoke mount bracket installation.
2. Place the display screen on the yoke mount bracket.
3. Install handle, and short clamp adjustment knob.
4. Install and connect any remaining cables and install the cable exit cover plate by following the instructions that came with the specific model.
5. Adjust the position of the display screen.



Note: The information and product specifications contained in these instructions are based upon data believed to be accurate at the time of printing. This information is subject to change without notice and without incurring liability. If you have questions regarding specific product details, please contact us.


Installation Instruction



Important: The illustrations that follow assume that the yoke stand is already installed on the desired surface.



Important: It is recommended to use two people to perform the following procedures.

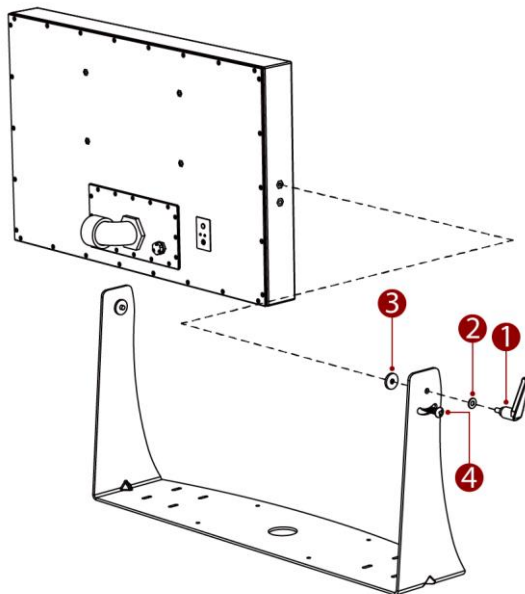

Install Handle

1. Position one side the display screen on the yoke mount bracket.
2. Insert adjustment handle (1) through one M6 washer (2), yoke mount stand and place a stand rubber (3) between the display screen and the yoke mount bracket.
3. Insert one M5 screw (4) to fix the handle position.

Install Short Clamp Adjustment Knob

4. Position the other side of the display screen on the yoke mount bracket.
5. Insert short clamp adjustment knob (1) through one M6 washer (2), yoke mount stand and place a stand rubber (3) between the display screen and the yoke mount bracket.
6. Adjust the position of the display screen if needed.

